


# LA-85

**MERCEDES SPRINTER 2500  
SINGLE REAR WHEEL AND 2500 4X4**

TOP BRACKET

BAG BOLTS

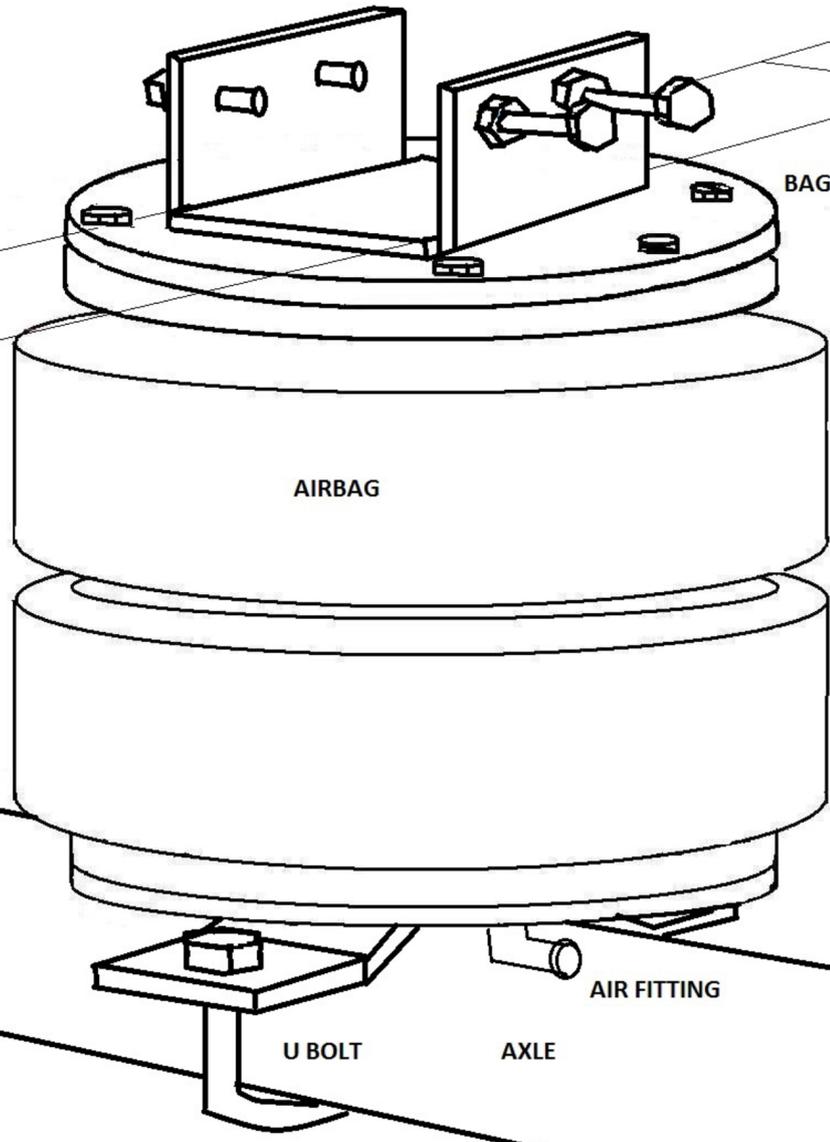

PLEASE NOTE 4X4:  
YOU WILL NEED TO REMOVE THE  
AXLE BUMPSTOP AS WELL, TO DO  
THIS REMOVE THE 2 SWAYBAR  
BOLTS ON EACH SIDE AND SLIDE  
OUT THE BUMPSTOP BRACKET  
FROM BEHIND THE BOLTS  
RE-INSTALL THE SWAYBAR  
BRACKET BOLTS

AIR FITTING

U BOLT

AXLE

**CHECK OUT [YOUTUBE.COM/BOSSAIRBAGSUSPENSION](https://www.youtube.com/BOSSAIRBAGSUSPENSION)  
FOR HELPFUL INSTALLATION VIDEOS**

